



1. Create an mbed account and login
2. Go to <https://os.mbed.com/components/MAXREFDES220/>


And click on Import Program

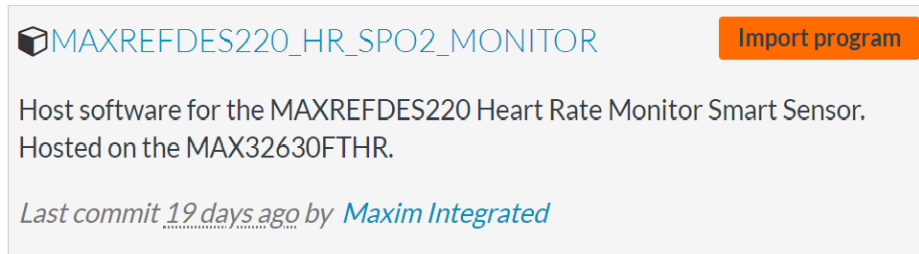



3. Check the “Program” check-circle and the “Update all libraries to the latest revision” checkbox.

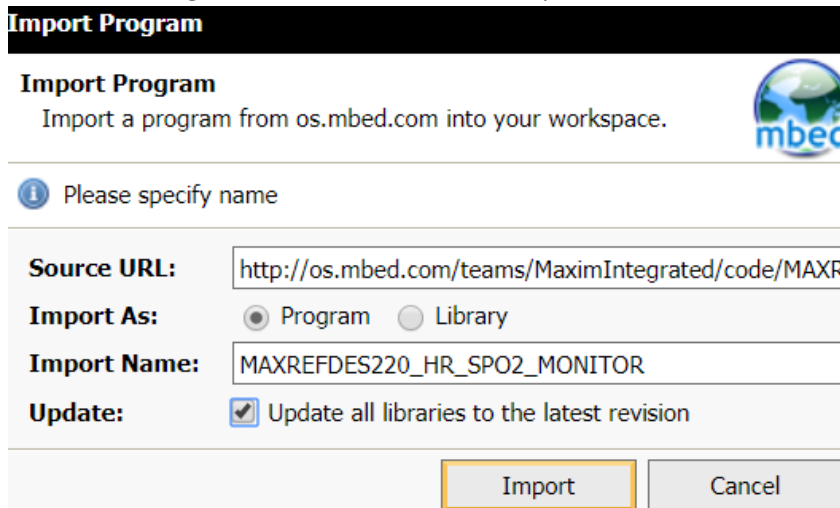


4. In the right corner, change the target platform to match your host microcontroller such as MAX32630FTHR.

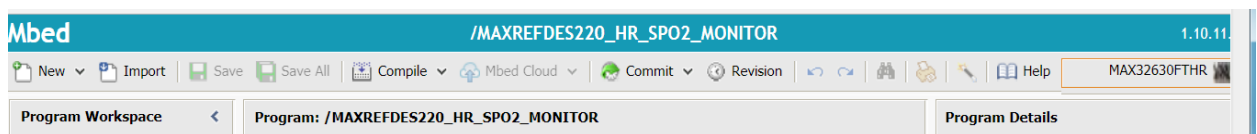


5. With the MAXREFDES220\_HR\_SPO2\_MONITOR selected, Click on Compile.

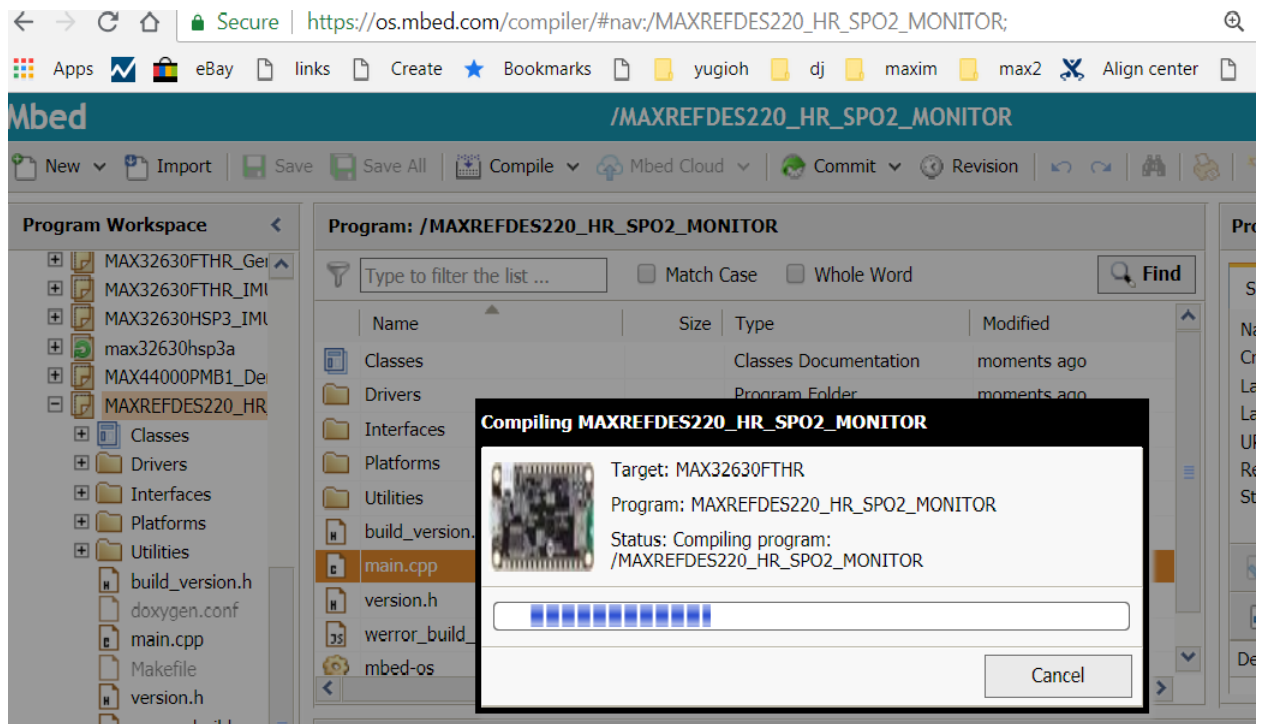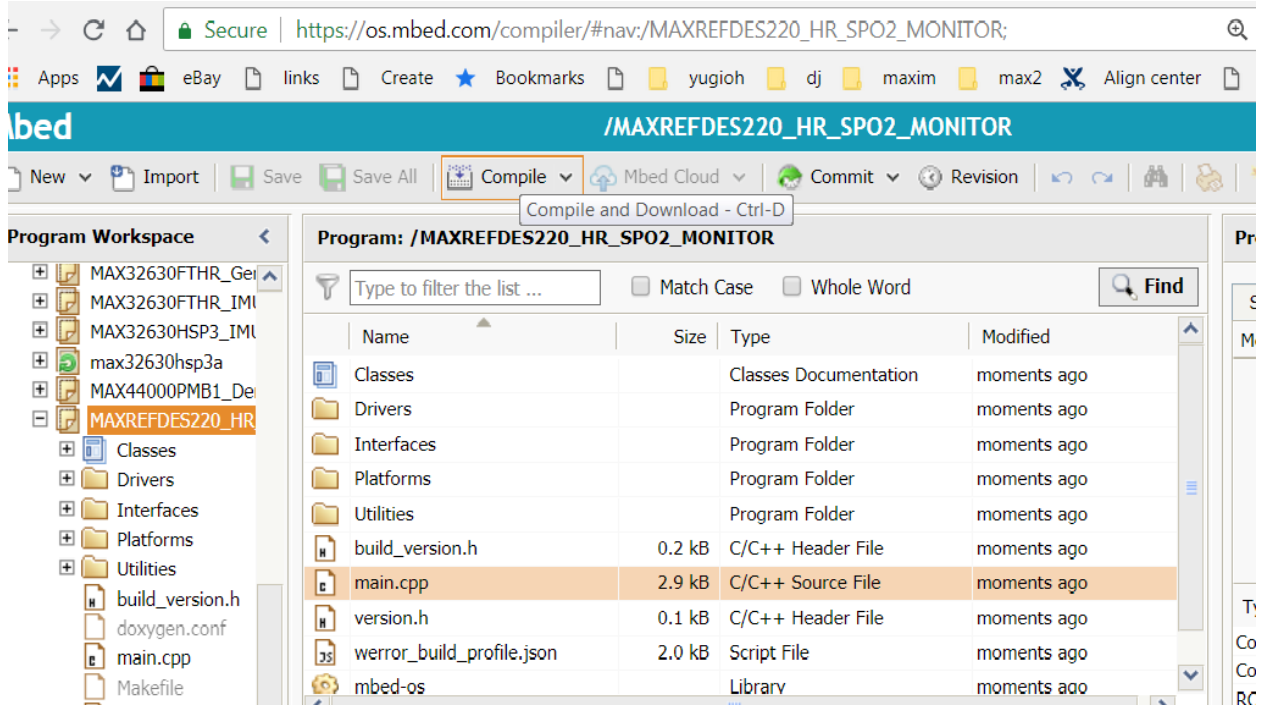


- The MAXREFDES220\_HR\_SPO2\_MONITOR\_MAX32630FTHR.bin will be in your download folder.

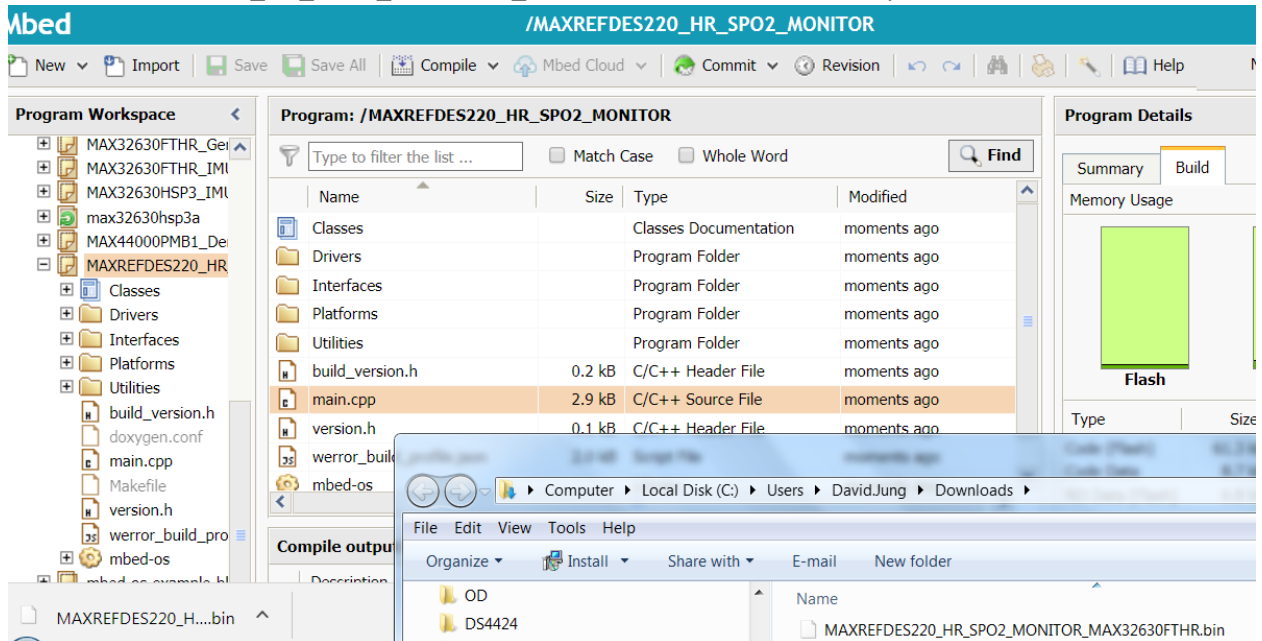

- You may copy the MAXREFDES220\_HR\_SPO2\_MONITOR\_MAX32630FTHR.bin file to the DAP\_LINK folder in order to flash the MAX32630FTHR.
- To Export to a different Toolchain, Right click the MAXREFDES220\_HR\_SPO2\_MONITOR in the left panel.

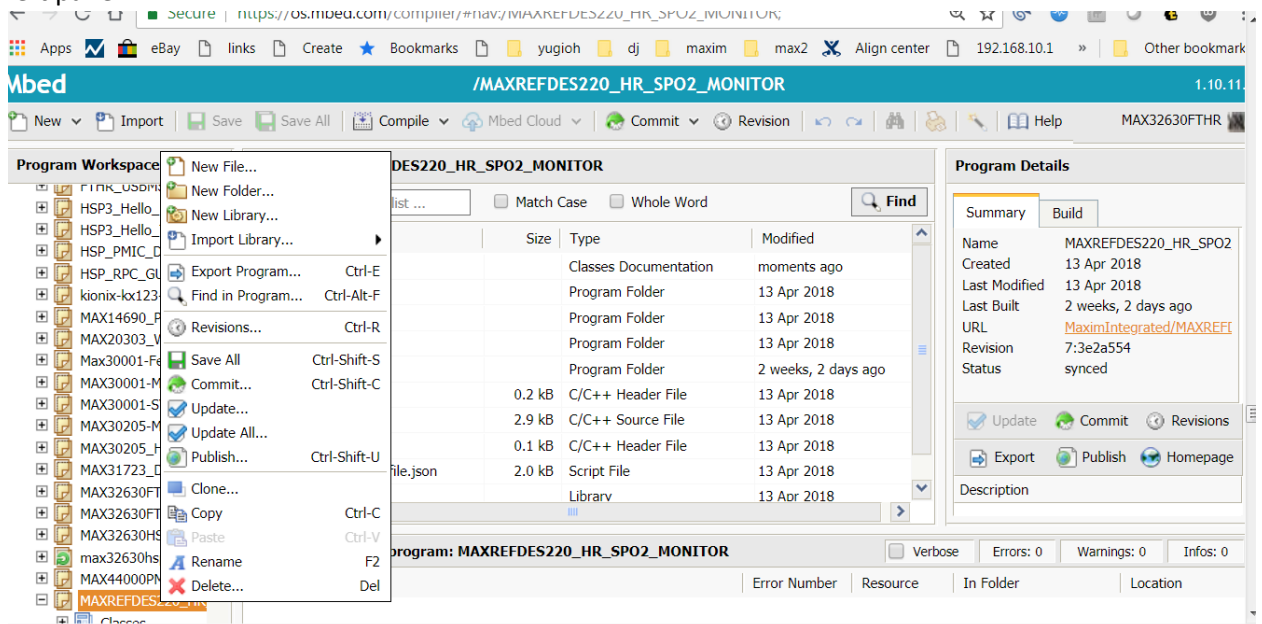

- For example, select uVision5 for Keil.

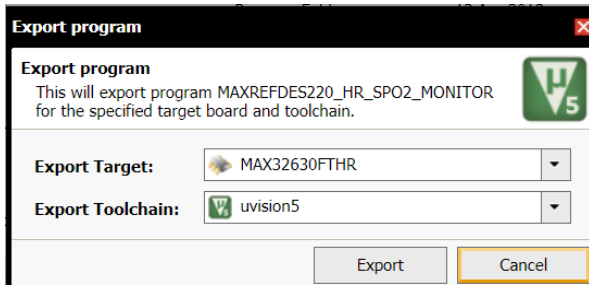

10. The zip file MAXREFDES220\_HR\_SPO2\_MONITOR\_uvision5\_max32630fthr.zip will be in your download folder.

